


PF-006 SIDE PANEL

Installation instructions

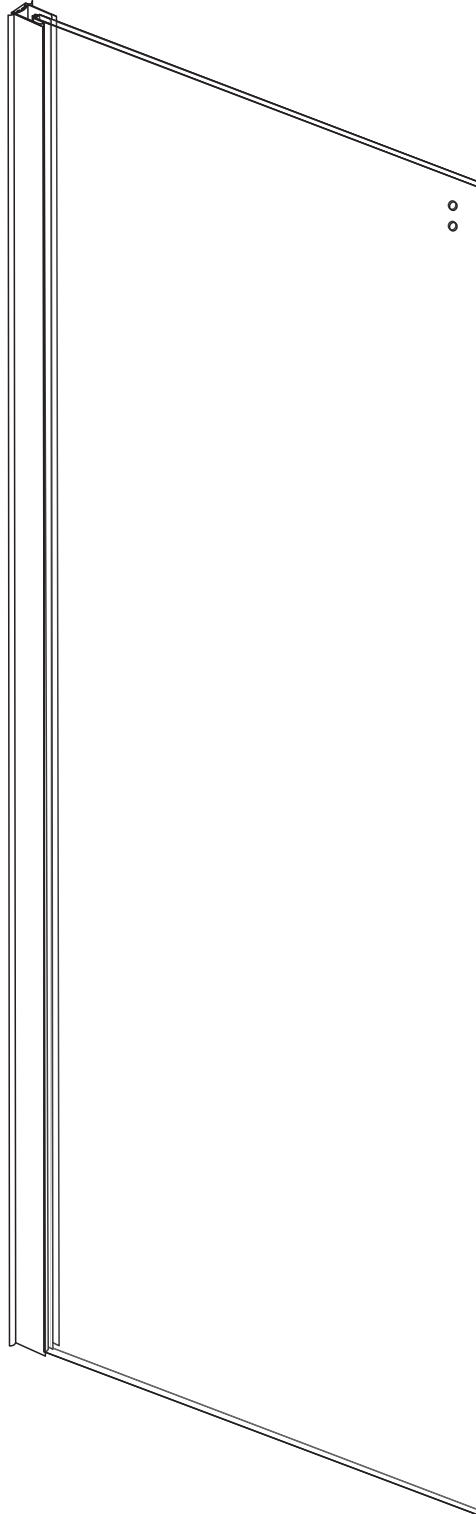


SIZE:70*190CM
80*190CM

Installation instructions


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start,make sure that you have the following tools to hand,plenty of space and a clean dry area for assembly.


Two people are needed. Please note:although these instructions are comprehensive,We always recommend that a technically competent installer should undertake installation.

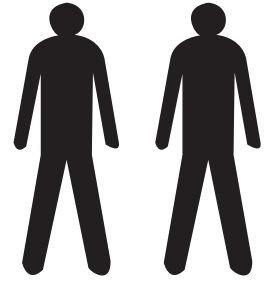


Drill bit to suit wall type
4mm

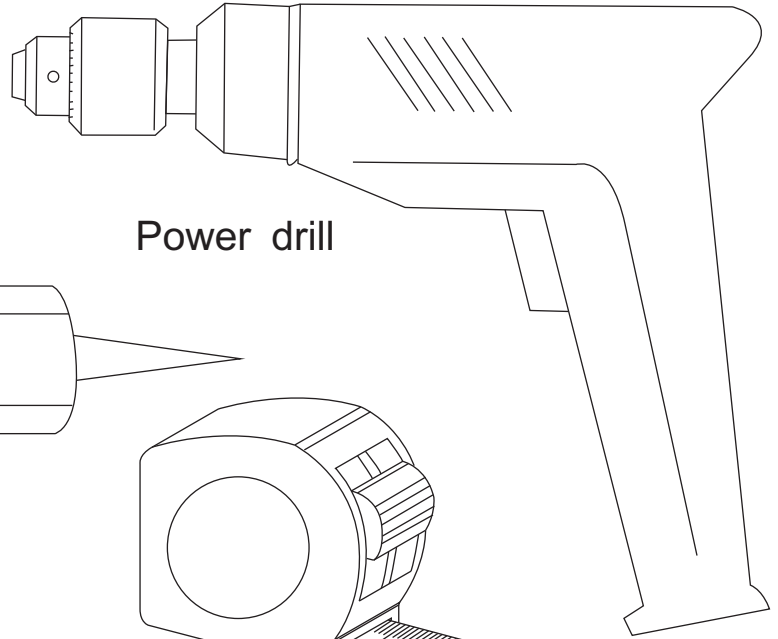


Power drill

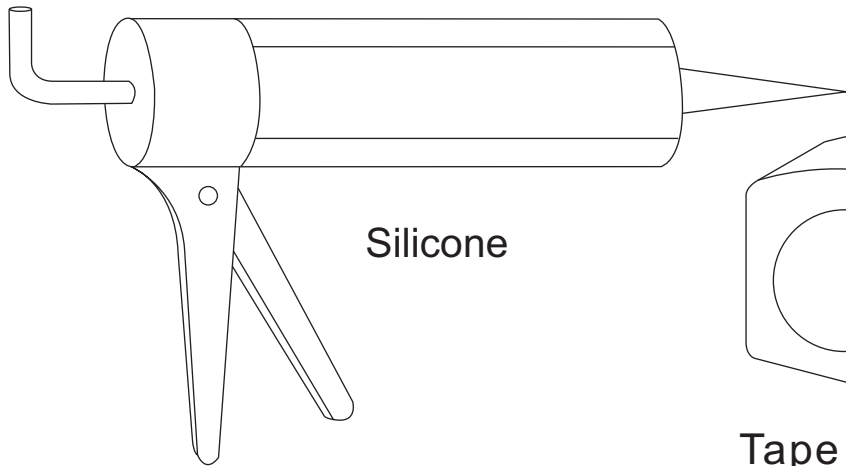


Silicone

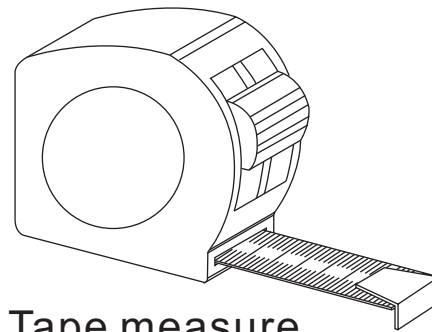


Tape measure

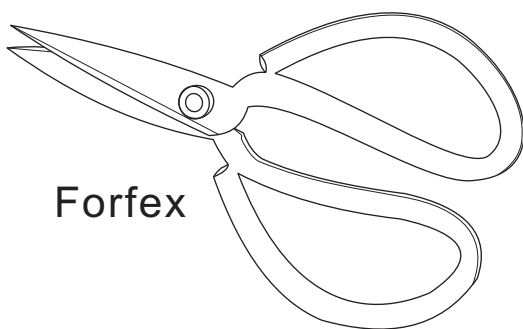


Forfex

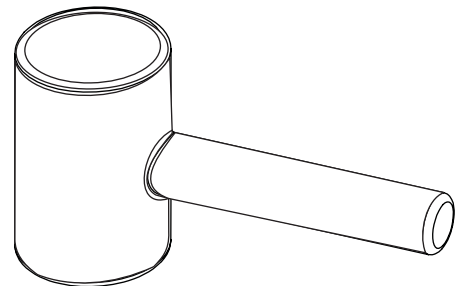


Rubber Mallet



Pencil





Magnetic cross head screw driver

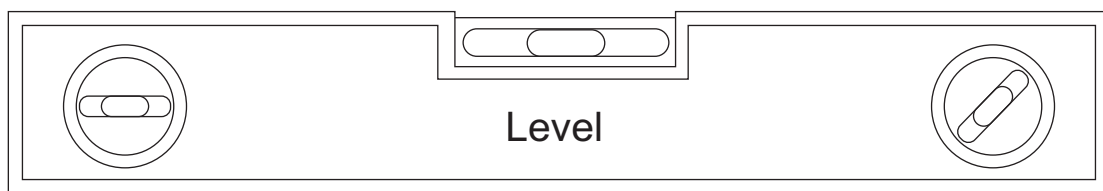


Level


Installation instructions

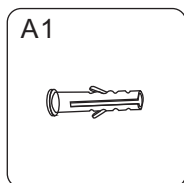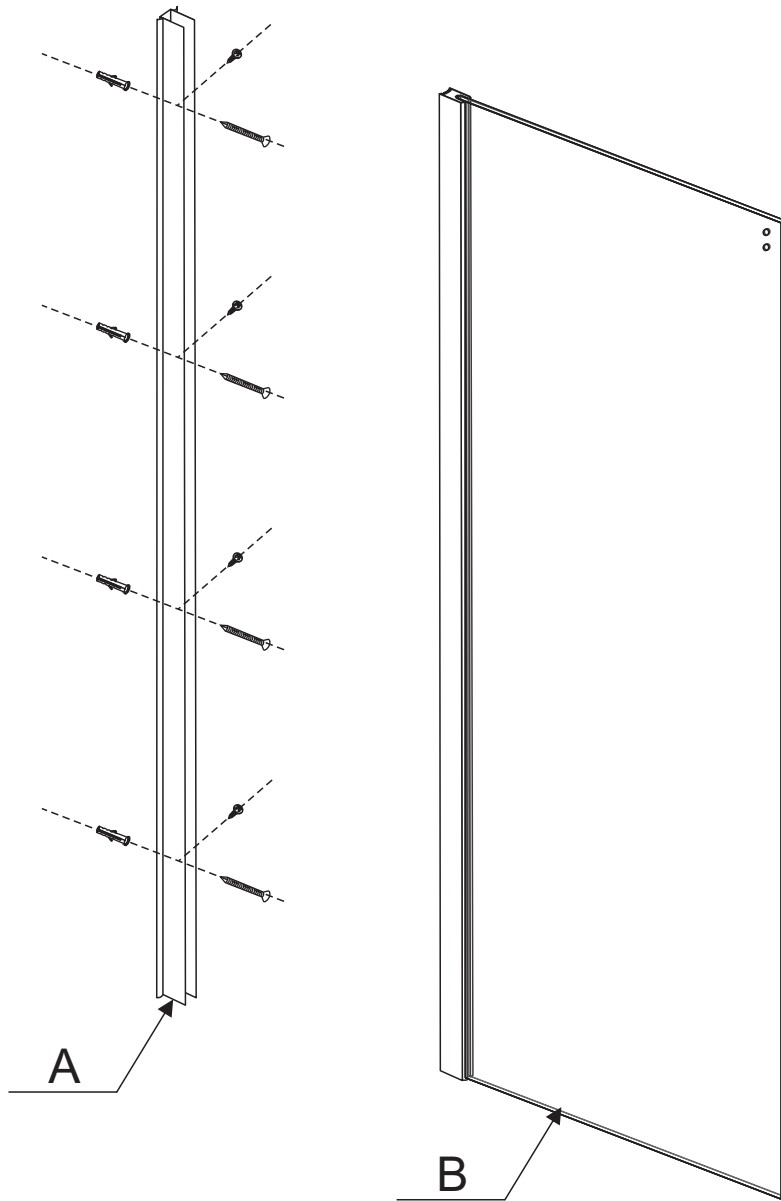


4PCS

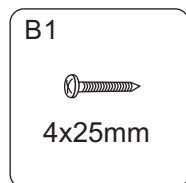

4PCS


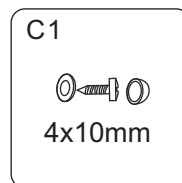


4PCS



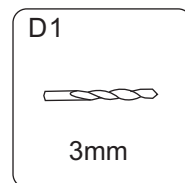


1PCS

Installation instructions

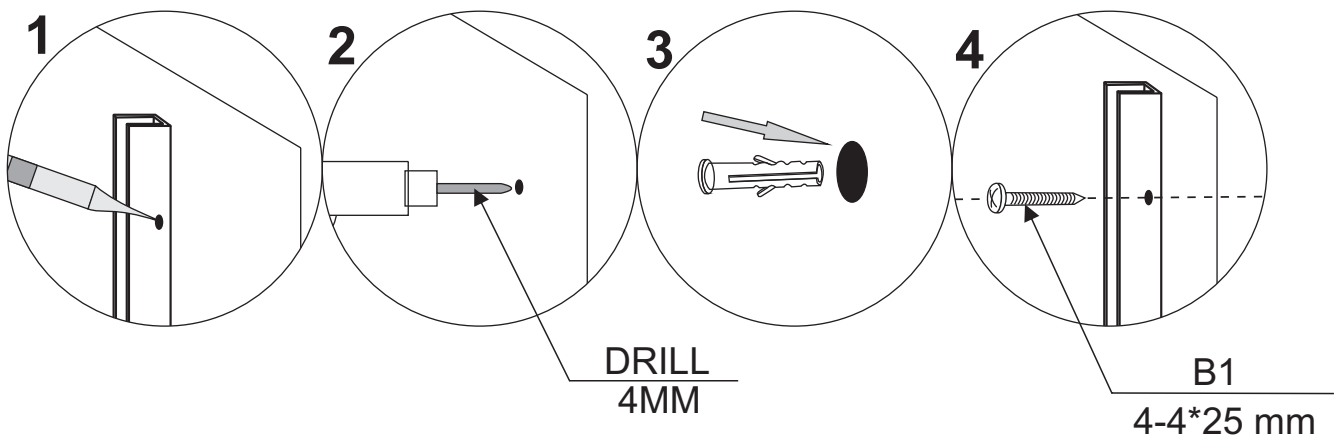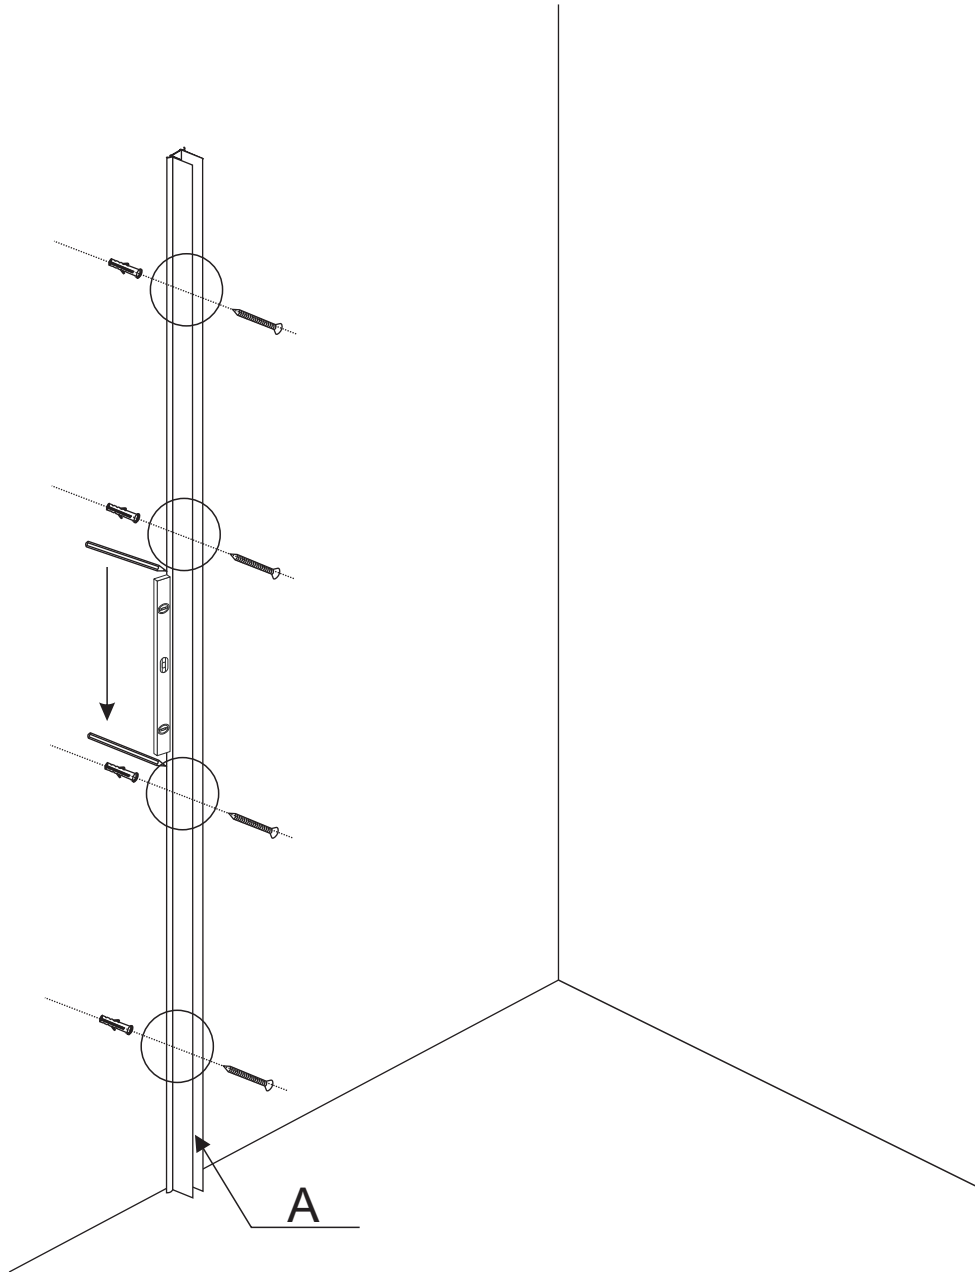

Installation instructions

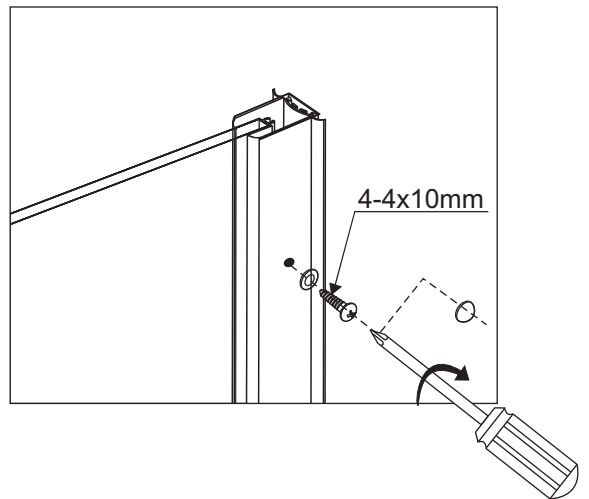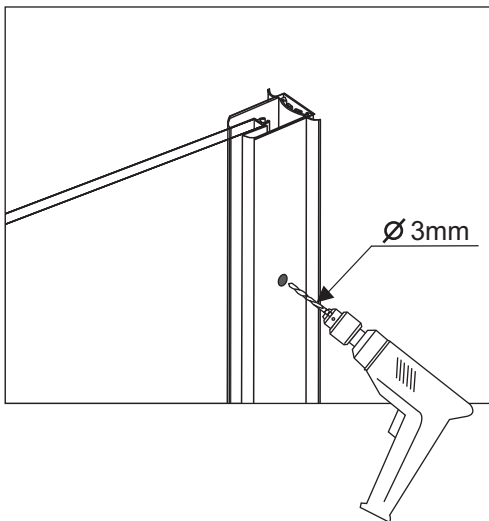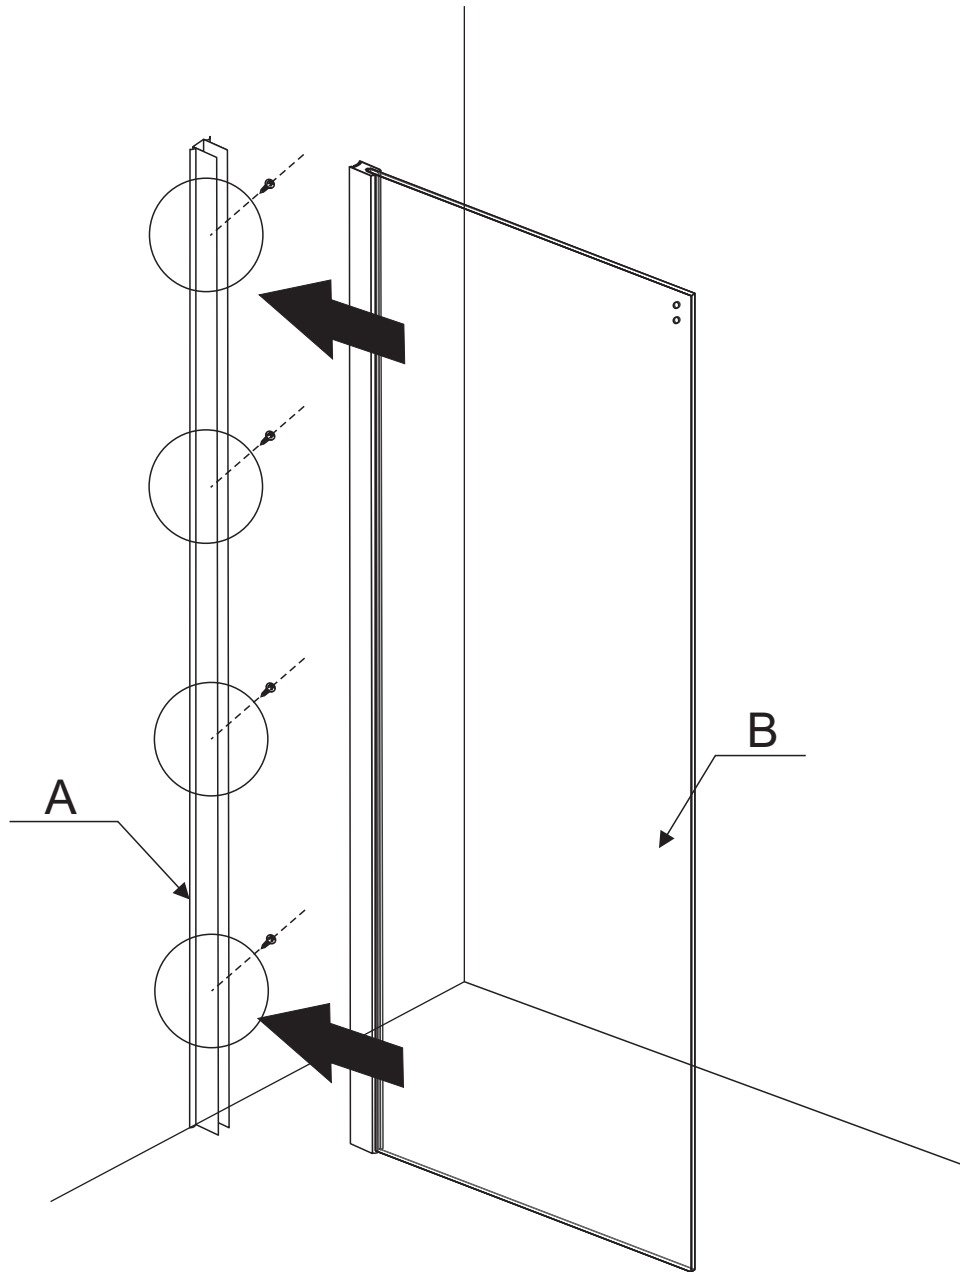

Installation instructions

